



# Link-It™ INSTALLATION INSTRUCTIONS

## SOFT SHACKLE ANATOMY:

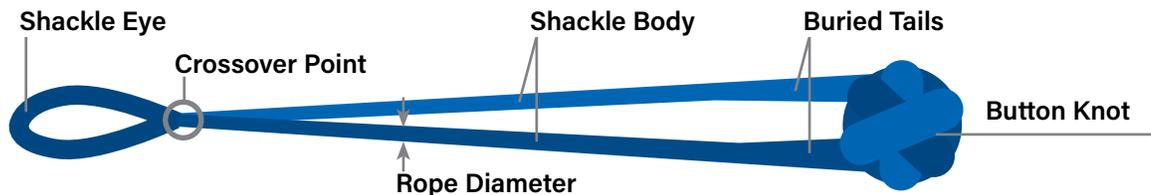


## SHACKLE CONFIGURATION SINGLE-PASS

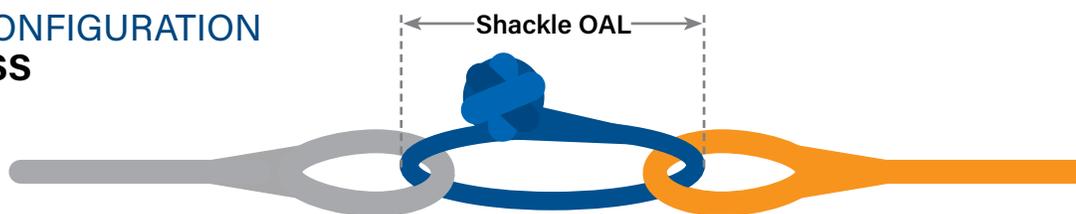


**1**

Set the bearing points close together, about one foot less than the desired shackle overall length.

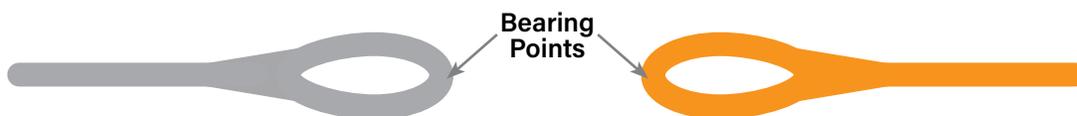


**2**

Place the button knot between the two bearing points. Avoid placing the base of the tail on the bearing point if possible.

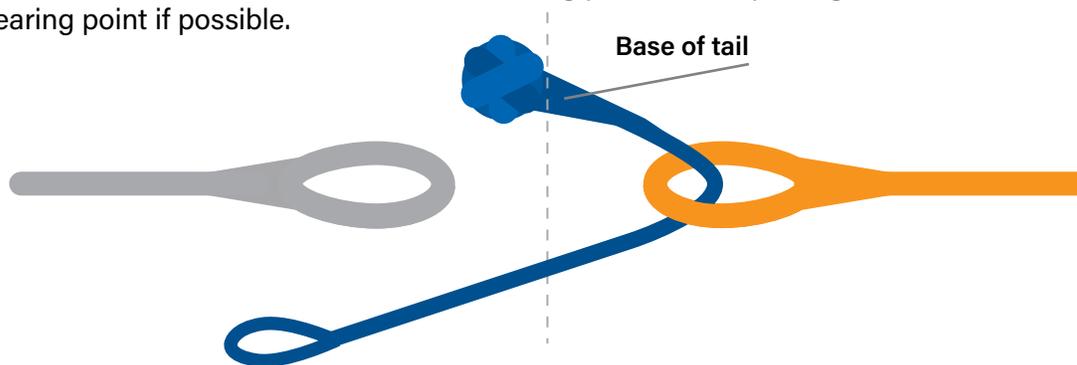

**3**

Thread the shackle eye end around the other bearing point.

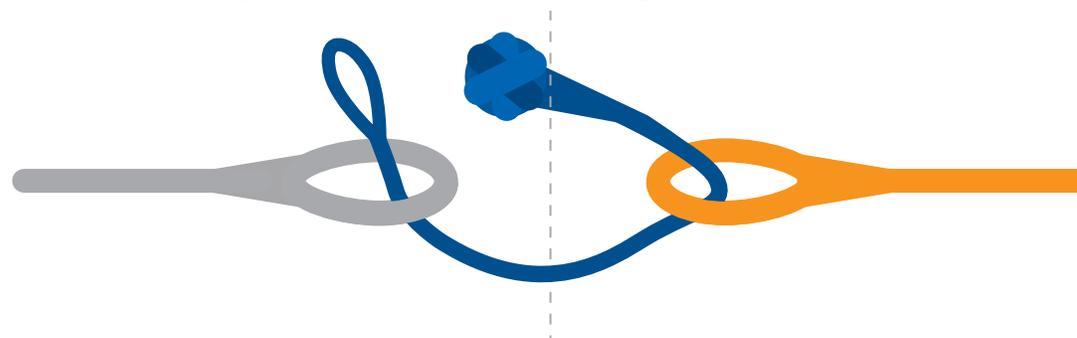

4

Widen the shackle eye by pulling on the penetrating leg at the crossover point. Pull until the eye can fit over the button knot.



5

Place the eye over the knot and rest the knot close to the crossover point. Secure the eye by pulling the same body leg in the opposite direction. Tighten the eye by hand.



6

FINISHED SINGLE PASS INSTALLATION. As the shackle is loaded the legs will adjust and balance.

